

SHUTDOWN SYSTEM

1. Turn off the main DC battery isolator.
2. Turn off the Solar Array AC Main Switch located in the switchboard or next to the inverter.
3. In case you have 2 AC Switches, both have to be switched off.
4. Turn off the Solar Array DC Main Switch located next to the inverter.

TO RESTART THE SYSTEM

1. Turn on the Solar Array DC Main Switch located next to the inverter.
2. Turn on Solar Array AC Main Switch located in the switchboard and/or next to the inverter.
3. Turn on the main DC battery isolator.

MAINTENANCE OF SOLAR ARRAY

If the angle of the PV module is 10 degrees or more, normal rainfall is sufficient to keep the module glass surface clean under most weather conditions.

There are no user serviceable parts in the system.

Under no circumstances should the solar inverter be opened or unplugged.

To confirm the operation of your system, check the inverter display while full sun is shining on your panels.